

RR-CirKits, Inc.

Affordable Electronics for Model Railroads

LocoBuffer-USB

Quick Start Guide

Revision-c

Getting Started

- The LocoBuffer-USB operates at 57.6K baud speed.
- Connect the included USB cable to an unused USB port on your computer and to the LocoBuffer-USB. Your computer should detect the new unit and open a driver installation dialog. (Mac, all Windows users see below)
- Since Microsoft has ended support for older OS versions, Windows Update no longer locates the LocoBuffer-USB drivers automatically.
- Windows users must manually install the drivers for your system from the included driver disk or a downloaded folder.
See: <http://www.rr-cirkits.com/win-8-driver-install.html> or <http://www.rr-cirkits.com/locobuffer-usb/Windows 10 install.pdf> for more info.
- Mac users choose the 'IMAC' folder, then the folder with your correct OS X version, and run the included .dmg file.
- The right hand green status indicator should illuminate as soon as your drivers are installed and they recognize the LocoBuffer-USB.
- Connect the unit's LocoNet[®] jack to any point on your system's LocoNet[®]. The left hand green status indicator should illuminate, and the red activity indicator should now indicate all LocoNet[®] activity.
- Set your software's settings to match the communications port.
- You should now be able to control your Railroad from your software.
- See <http://www.rr-cirkits.com/manuals/LB-USB-manual.pdf> for further help.

RR-CirKits, Inc.
7918 Royal Ct.
Waxhaw, NC 28173
USA

<http://www.rr-cirkits.com>
sales@rr-cirkits.com
service@rr-cirkits.com
1-704-843-3769
Fax: 1-704-243-4310